



iCute Cam Instructions

1.APP Download




2.Select the Open and save, if the P2P server status display "normal", meant the camera can be connected through the APP; if the P2P server displays the "Not connected", check whether the IP of the camera can access the external network

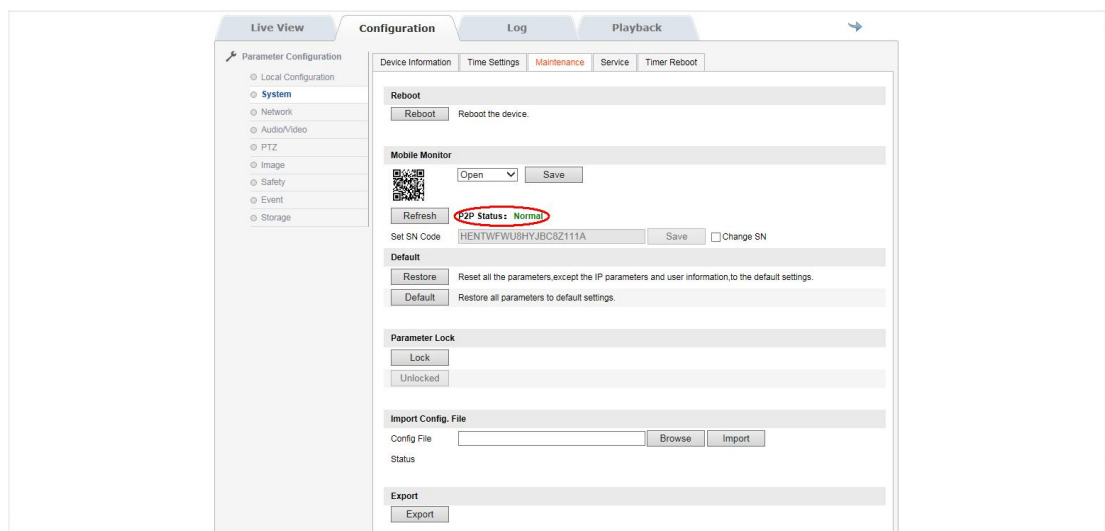

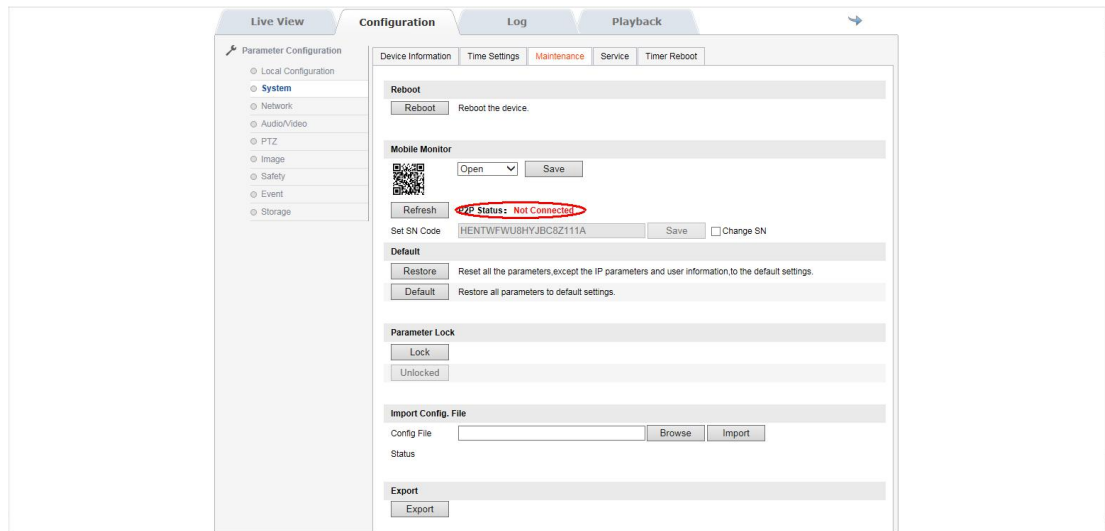

3.Add Camera by Scan QR Code

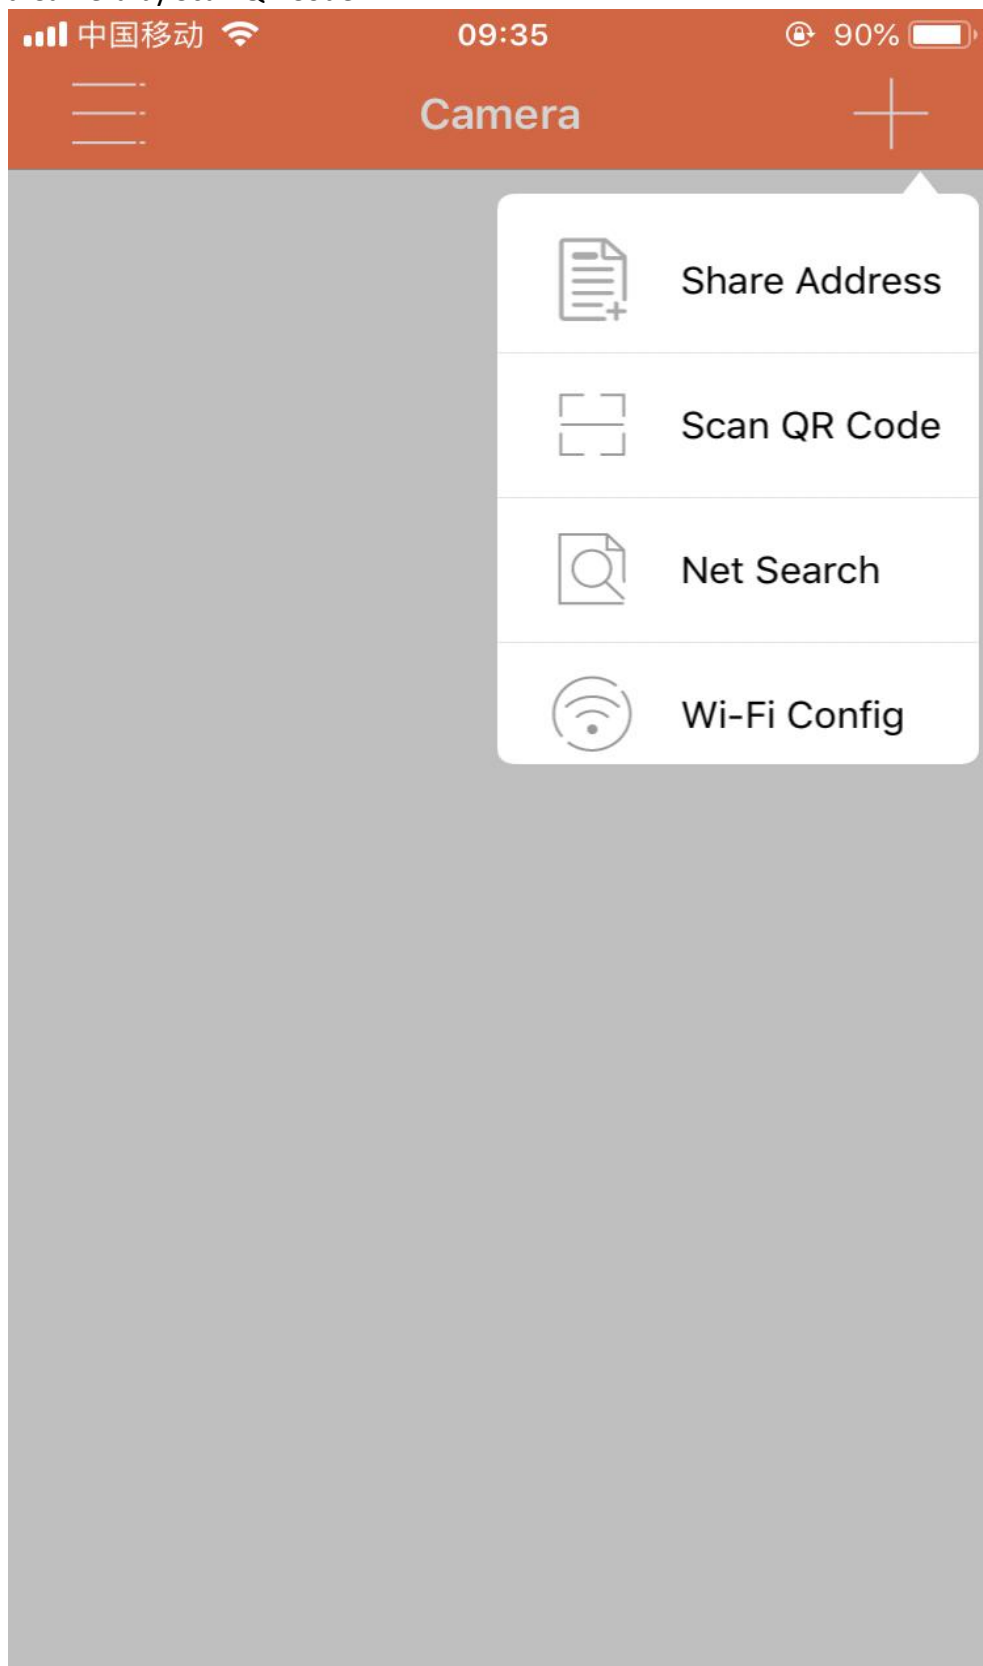

4. Enter Device Name and Save

中国移动

09:35

89%

<

Add Device

✓

ID

HENTWFWU8HYJBC8Z111A

Device Name

Please Enter Device Name

Username


admin

Password


●●●●●●

👁


5. Click the red box to view the screen

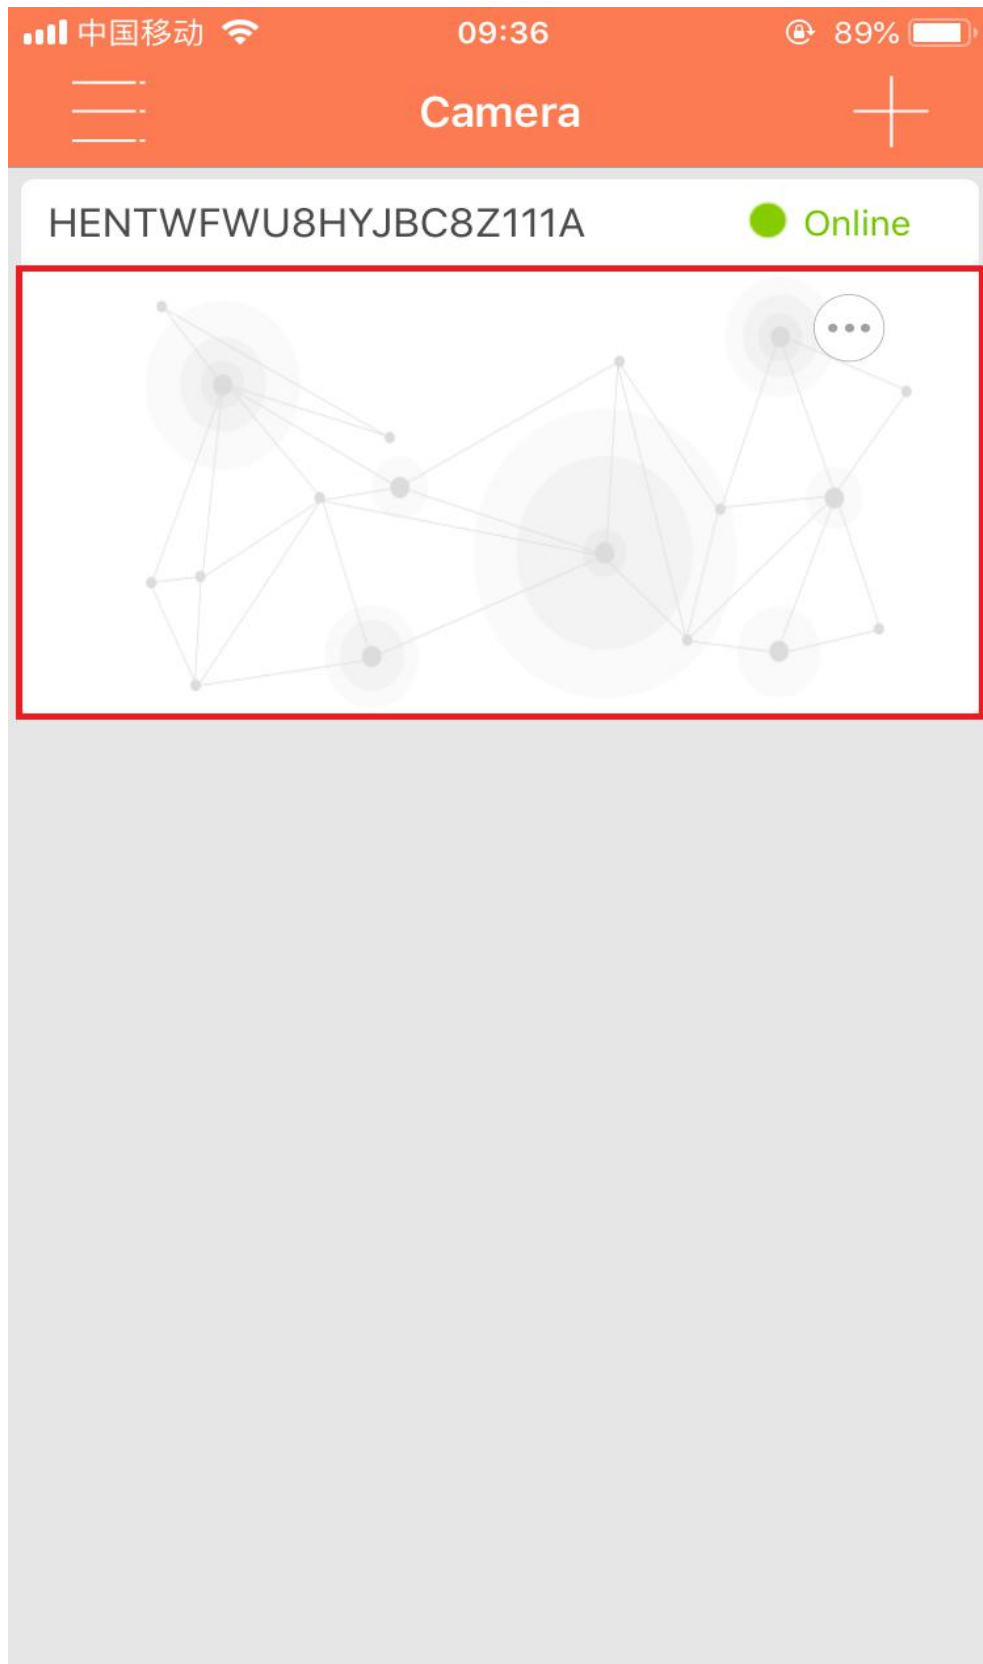

6.Set screen quality

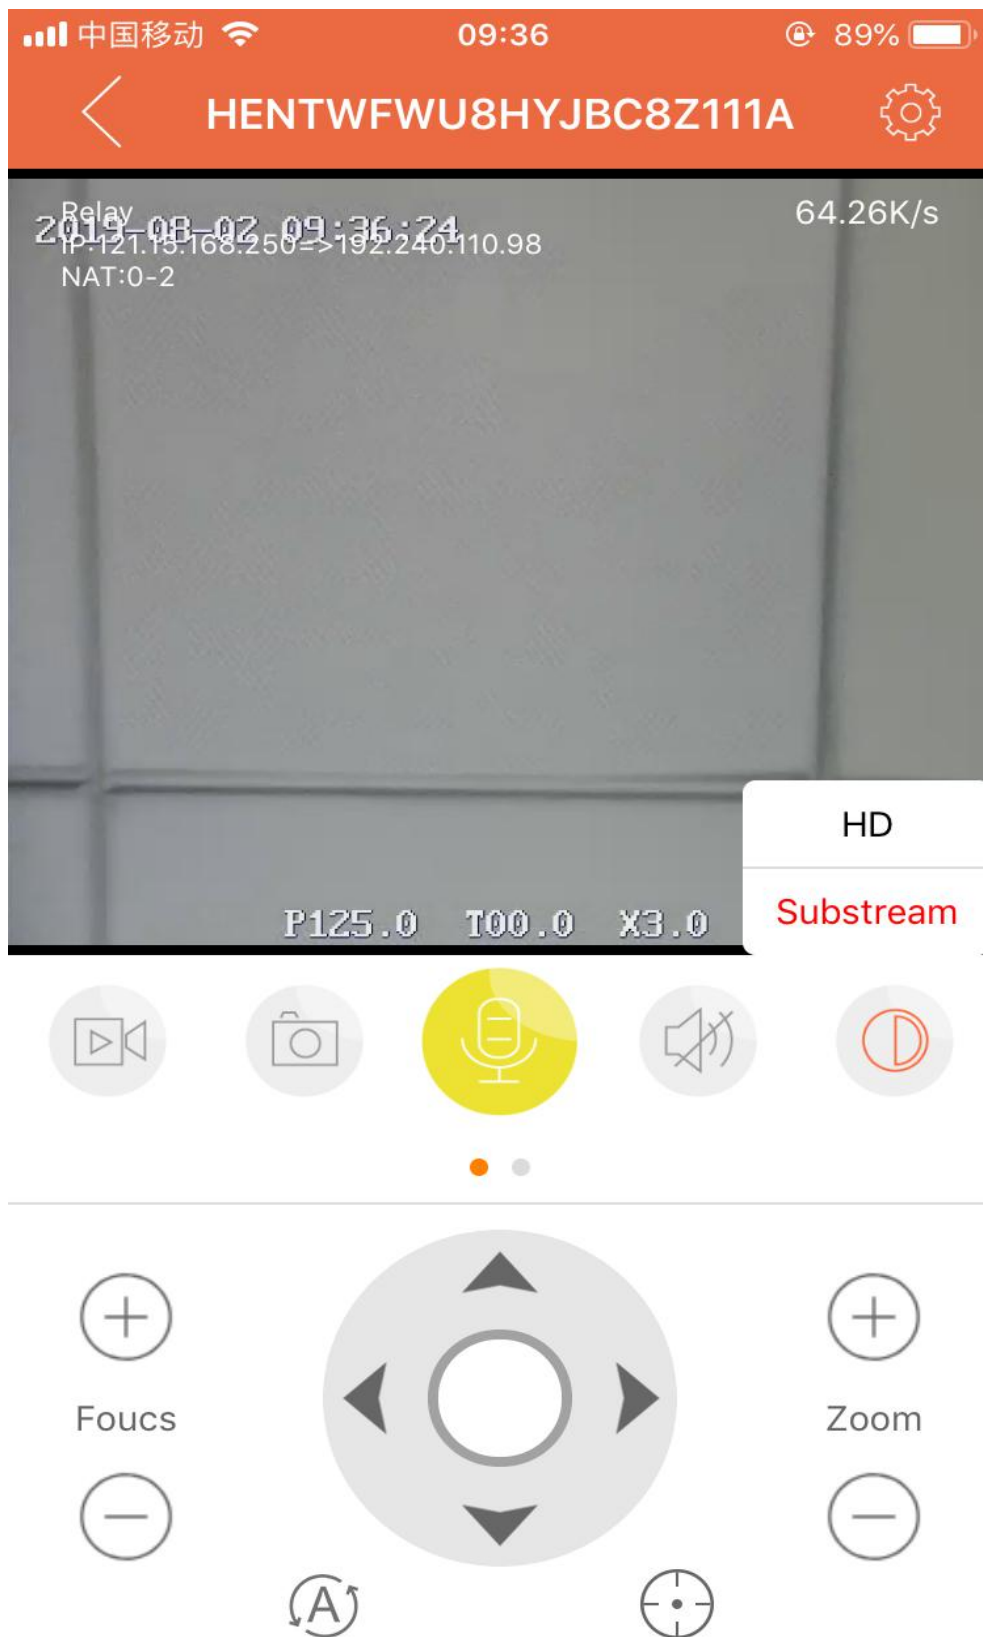

7. See the Playback

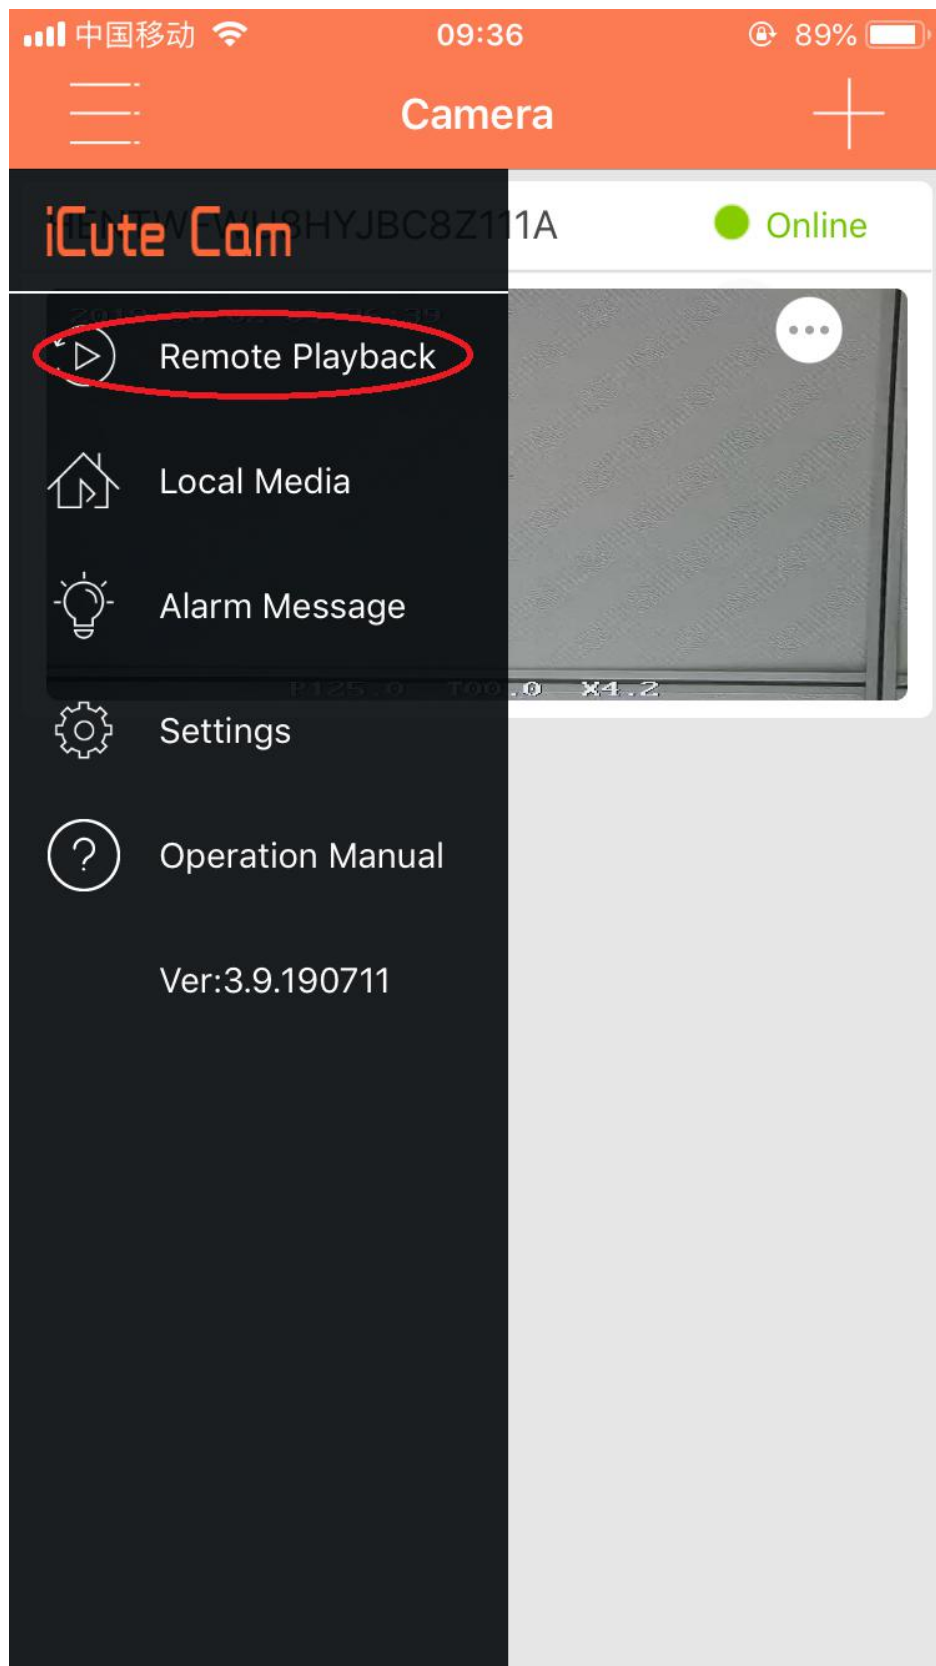



Remote Playback

Time

 2019-08-02

Device




HENTWFWU8HYJBC8Z11...



Remote Playback



2019-08-02 09:17:04

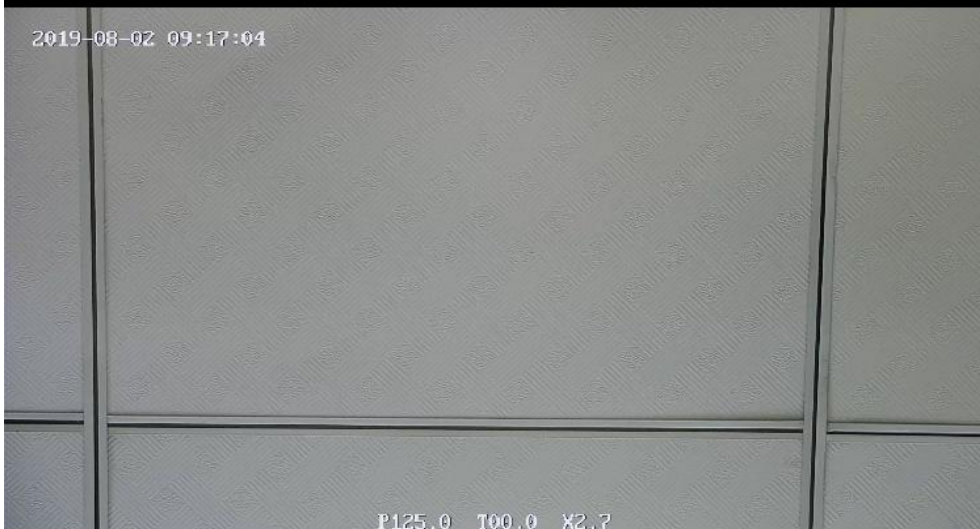

F125.0 T00.0 X2.7



2019-08-02 09:17

